

NEXT
audiocom

X4

USER MANUAL



Wireless Headphones

EN

PACKAGING CONTENTS



X4 Headphones



Micro USB
Charging Cable



User Manual




Protective Bag




3.5mm Jack
Audio Cable

X4 OVERVIEW

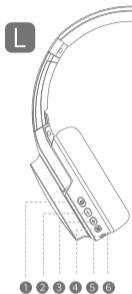

- ① Power Button
- ② Volume - (Previous Track)
- ③ Volume + (Next Track)
- ④ Multi-Function Button (MFB)

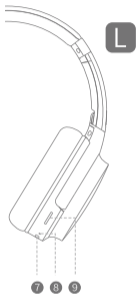

- ⑤ AUX (3.5mm Jack)
- ⑥ Status LED
- ⑦ USB Charging Port
- ⑧ Microphone
- ⑨ Micro SD Card Slot

POWER ON

Long press the power switch for 3 seconds, the LED lights up blue and then alternatively flashes blue and red which means it is on pairing mode.

BLUETOOTH CONNECTION

1. Ensure the X4 is turned on, and the LED indicator is flashing blue and red. This indicates the X4 is ready to pair.
2. Turn on the Bluetooth on your mobile device and search for devices to pair.
3. Click "NEXT X4" to pair with your X4 headphones.

NOTE: Only one device can be paired at a time.

4. The LED turns solid blue, when a successful connection is completed.
5. The headphones will automatically connect to the last paired device if near each other.

UNPAIR BLUETOOTH DEVICE

Long press the power switch for 5 to 6 seconds. The headphones will power off and the LED will light blue. The headphones are now unpaired.

ANSWERING INCOMING CALLS

Short press the power switch to answer incoming calls.

END CURRENT CALL

Press the power switch once to end the current call.

REJECT INCOMING CALL

Press the power switch for around 1 second, when there is an incoming call, to reject it.

LAST NUMBER REDIAL

Double press the power switch to redial the last called number.

POWER OFF

Long press the power switch for 3 seconds to turn the device off.

MUSIC REPRODUCTION

1. Play / Pause: Short press the power switch.
2. Previous Track: Long press - button to select the previous song.
3. Next Track: Long press + button to select the next song.
4. Increase Volume: Short press + button to increase the volume level (There will be a prompt when the maximum volume is reached).
5. Decrease Volume: Short press - button to decrease the volume level.

AUX MODE – 3.5MM JACK

1. Plug and play: Connect the X4 to an audio player using the provided 3.5mm audio cable. The headphones can be used while turned off. It is compatible with several different devices.

MICRO SD MODE

Insert a micro SD card, press the MFB button to select the micro SD mode, and the playback of MP3 files starts automatically. The size of the card is limited to 32GB.

FM RADIO MODE

1. Short press the MFB button to change to FM mode, then press the power switch to scan and memorize the FM radio stations.
2. Long press + or - buttons to select the desired radio station. Short press the + or - buttons to increase or decrease the volume level.

CHARGING THE HEADPHONES

1. As the headphone has a built-in, non-removable and rechargeable battery, please use the provided micro USB cable to charge it.
2. The charging voltage and current is 5V/1A. Please charge the X4 with an input power equal or below 5W (1A).
3. Fully charge the headphones before the first use. It takes around two and half hours to charge for the subsequent use.
4. During charging, the LED lights up red, and goes off upon charging is completed.
5. The battery performance may decrease with increasing number of charging cycles and natural battery aging.

TECHNICAL SPECIFICATIONS

FR Driver: 40mm Full-Range Driver

Frequency Response: 20Hz - 20kHz

Bluetooth Tech: v5.0 - A2DP/AVRCP/HSP/HFP

Bluetooth Range: 10m

Audio Inputs: Stereo Bluetooth, 3.5mm Stereo Jack, Micro SD Card, FM Radio

Battery Type: 400mAh (Lithium-ion)

Battery Play Time: Up to 18 Hours

Battery Charge Time: 2.5 Hours

Standby Time: Up to 600 Hours

Charging Voltage/Current: DC 5V/1A

Dimensions (WxHxD): 199 x 176 x 50mm

Net weight: 186g

CORRECT DISPOSAL



When the X4 is to be definitively discarded, take the product to a local recycling plant for a disposal which is not harmful to the environment. This equipment should not be treated as general household waste. Devices marked with this symbol must not be disposed of as household waste. For more information, please contact your retailer or local authorities.

WARNINGS

1. Please follow these instructions before use.
2. Please charge the headphones with a 5V/1A DC charger. Other chargers may damage the headphones.
3. Please store or use the headphones in a normal temperature environment (5°C to 25°C).
4. Please keep the headphones away from heat sources, such as radiators, hot air regulators, stoves, or other heat generating instruments.
5. Do not jam the in/out headphone ports, such as charger, microphone and audio jack.
6. In order to protect your hearing and extend the headphones service life, it is not recommended to adjust the volume to the maximum level for a long period of time.
7. If the equipment is not functioning properly or has been damaged in any way, switch it off immediately.
8. Do not open or try to service the equipment. It may only be repaired by authorized, qualified personnel.



 Rua da Venda Nova, 295 | 4435-469 Rio Tinto, Portugal

 info@nextaudiocom.com

 www.nextaudiocom.com

 [instagram.com/next.audiocom](https://www.instagram.com/next.audiocom)

 [facebook.com/nextaudiocom](https://www.facebook.com/nextaudiocom)